


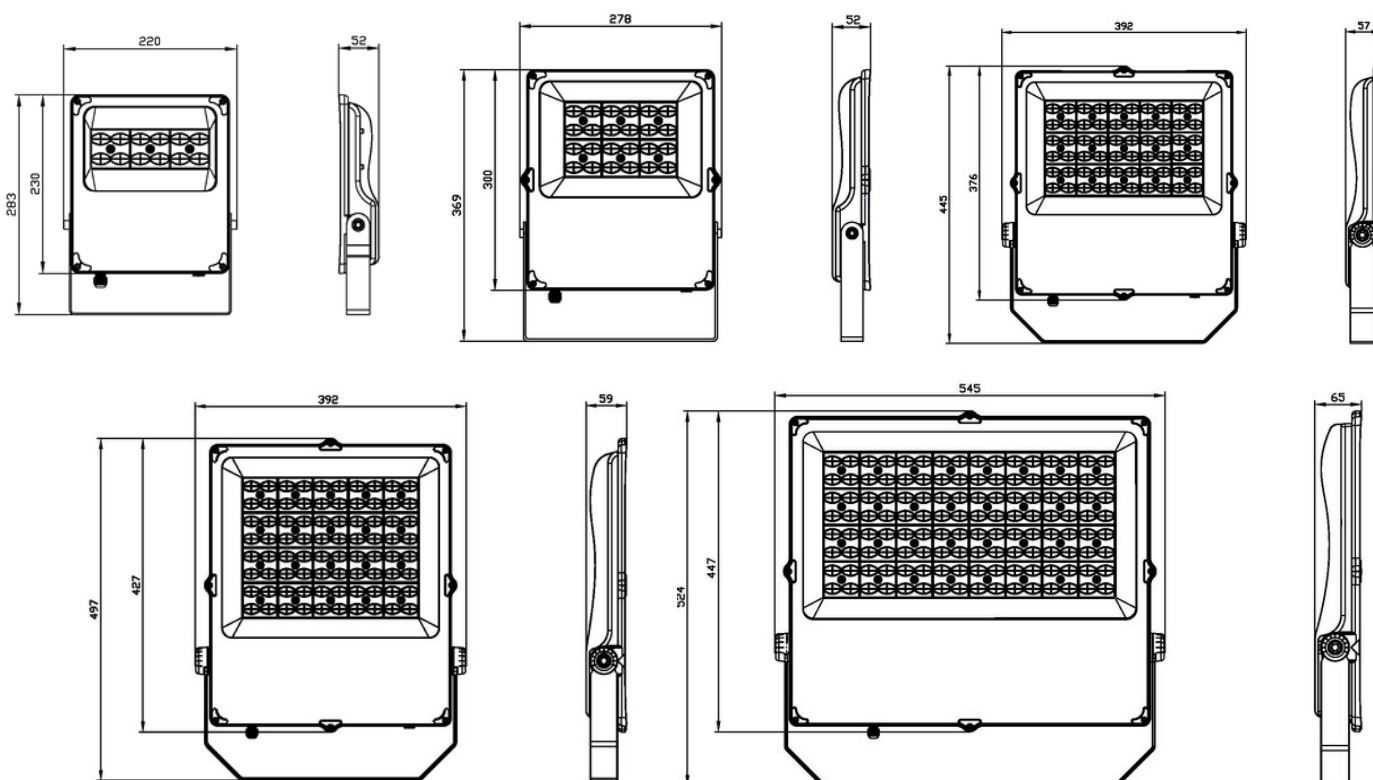

	TORE S	TORE M	TORE L	TORE XL	TORE XXL
Systemeffekt	12 - 32 W	42 - 80 W	104 - 132 W	174 - 217 W	263 W
Ljusflöde	1800 - 4500 lm	6500 - 11000 lm	15000 - 20000 lm	25000-30000 lm	40000 lm
Ingångsspänning/ Strömfrekvens	AC100-240V 50/60 Hz				
Vindytta min/max	0.01 m ² / 0.06 m ²	0.01 m ² / 0.1 m ²	0.02 m ² / 0.18 m ²	0.02 m ² / 0.19 m ²	0.03 m ² / 0.24 m ²
Armatur nettovikt	1.5 kg	2.5 kg	5 kg	6 kg	10 kg
Omgivningsfuktighet	10%-90%RH				

Kopplinsdiagram

Fas	■	brun
Nolla	■	blå
Jord	■	gul & grön

*OBS! Jord
anslutning gäller för
skyddsklass I
armaturer.



Varning, risk för elstötar.

Montering

1. Fixera monteringsbygeln.

2. Justera in önskad vinkel på armaturhuset.



3. Fäst skruvarna genom monteringsbygeln och in i armaturhuset.

4. Anslut kablarna:


Brun=L

Blå=N





Gulgrön= G (skyddsjord)

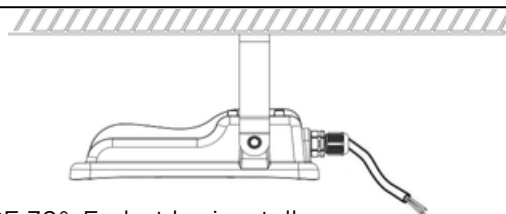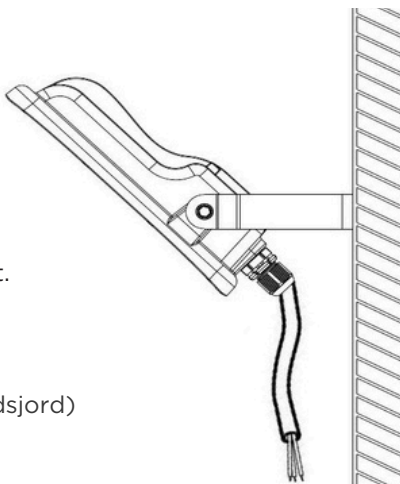

*TORE 70°: Endast horisontell montering mot marken.

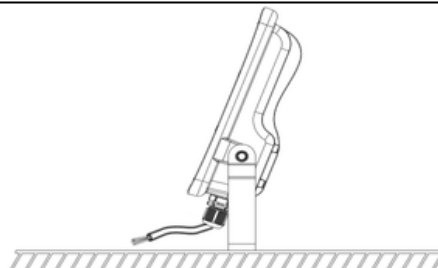

Mått på monteringsbygeln

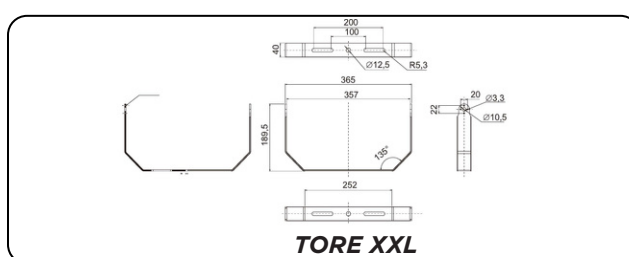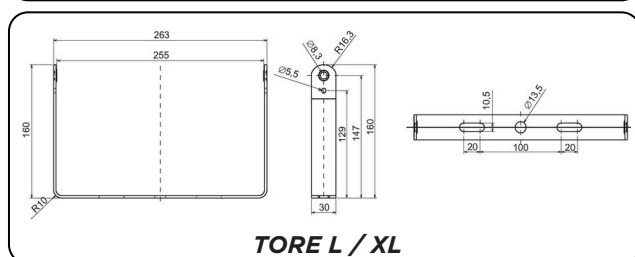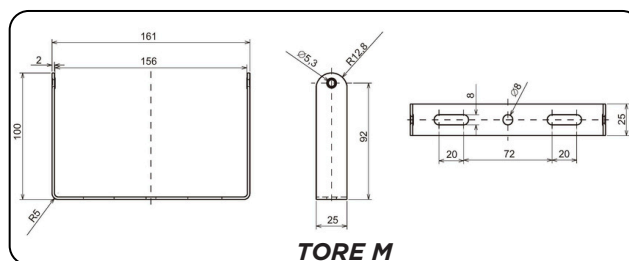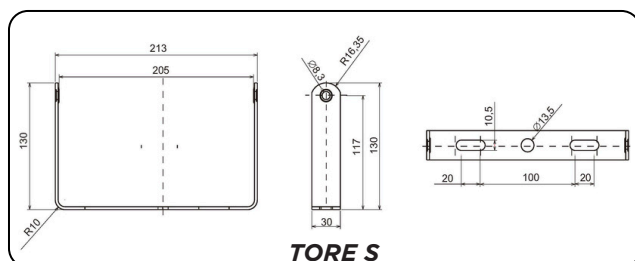

SÄKERHETS- INSTALLATIONSANVISNINGAR Läs dessa instruktioner före installationen påbörjas och lämna den vidare till brukaren av anläggningen. Armaturen bör installeras av behörig installatör och enligt gällande föreskrifter. Se till att spänningen är frånslagen före installation eller underhåll. Installera armaturen enligt dessa instruktionerna. **För att maximera livslängder, placera armatur och drivdon långt ifrån värmekällor och i ett väl ventilerat utrymme.** Använd medföljande kablage och drivdon för bäst funktion och säkerhet.

SAFETY AND INSTALLATION INSTRUCTIONS Read these instructions carefully before commencing installation and retain for future reference. The luminaire should be installed by a licensed electrician and in accordance with local regulations. Make sure that the power is off before installation or maintenance. Install as described in this manual. **To maximize life span, install the luminaires and the drivers as far away from heat sources as possible and in a well ventilated area.** Use the supplied cable and driver for best function and safety.

OBS: Ljuskällan i denna armatur får endast bytas av tillverkaren eller av tillverkaren utsedd kvalificerad personal. Strömmen får aldrig regleras på sekundärsidan, detta kan skada eller förstöra lysdioden. Felaktig installation kan häva garantiåtagande. Vid installation i våtutrymme måste drivdonet placeras i torr zon.

NOTE: The light source in this luminaire may only be replaced by the manufacturer or by qualified personnel designated by the manufacturer. Never regulate the power on the secondary side, this can damage or destroy the LED. Faulty installation may void warranty. When installing in wet areas, the driver must be placed in a dry zone.

